


# MISHIMOTO

## INSTALLATION STEPS:

1. PLACE MM10062 INTO THE CENTER OF PASSENGER SIDE TOW HOOK.
2. PLACE MM10052-01 ON TOP OF THE PASSENGER SIDE TOW HOOK.
3. INSERT TWO HF8X1.25-35 BOLTS THROUGH MM10052-01 AND MM10062.
4. HOLD MM10052-02 UNDER THE PASSENGER SIDE TOW HOOK AND SECURE IT IN PLACE WITH THE BOLTS INSTALLED IN THE PREVIOUS STEP.
5. FASTEN MM10001-02 TO MM10052-02 IN THE DESIRED ORIENTATION USING THE PROVIDED BF8X1.25-16B BOLTS.
6. FASTEN YOUR LICENSE PLATE TO MM10001-02 USING THE PROVIDED BF6X1.0-12B BOLTS.

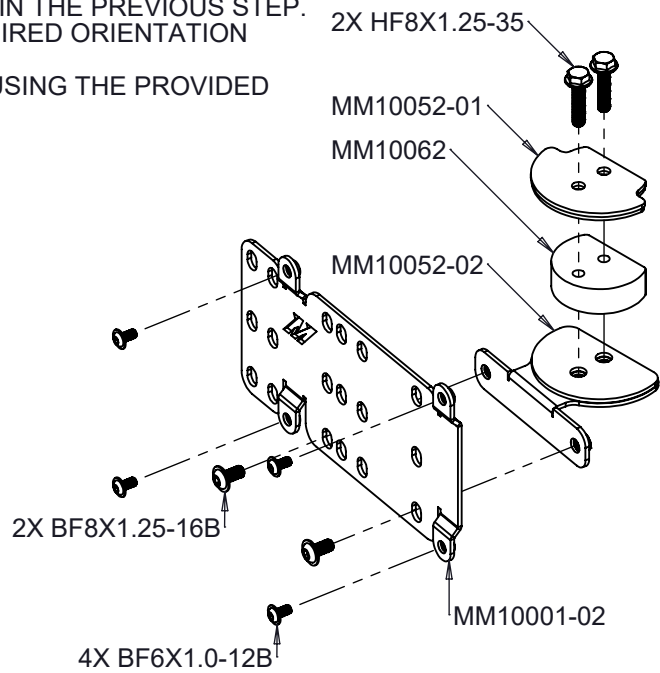

### BILL OF MATERIALS

PART NUMBER	DESCRIPTION	QUANTITY
MM10052-01	BRACKET 1	1
MM10052-02	BRACKET 2	1
MM10001-02	BRACKET 2	1
MM10062	FOAM SPACER	1
BF6X1.0-12B	M6 BOLT	4
BF8X1.25-16B	M8 BOLT	2
HF8X1.25-35	M8 BOLT	2